




Service Manual & Warranty Information

SAFE-T GRID™

Your Paw Brothers® Professional Low-Low Super Electric Grooming Table features a removable Safe-T Grid® table top for easy cleaning and a unique scissor shaped base that eliminates wobbling and tipping. Our Safe-T Grid® Top helps groomers know exactly where to safely place their client. Includes a ruler on both sides to help measure poodle pom, ribbon, bandannas, and more. The all-metal frame is strong and long-lasting. An antistatic baked epoxy finish adds style and durability. The removable top is made with Chilean poly-board covered by a premium non-slip rubber surface. The dual foot control switch panels allow the heavy-duty electric motor to adjust the table top from 10 1/2" to 36 1/2", with a maximum lifting capacity of 250 lbs.

WARNING: Always store the electrical power cord under the frame assembly. Do not allow the cord to become caught in the scissor-lift frame assembly.

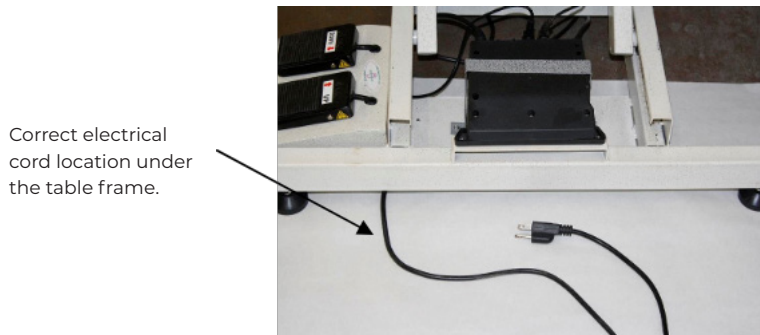

CAUTION: To prevent floor damage, install the leg levelers immediately. Do not attempt to move or slide the table without the levelers.

In the unlikely event your table should need repair the following replacement parts are available:


- | | |
|------------------------|--------------------------|
| 1. Electric Motor | 4. Leg Levelers |
| 2. Motor Control Unit | 5. Grooming Arm |
| 3. Foot Control Switch | 6. Safe-T Grid Table Top |

Initial Inspection

When your Paw Brothers® Professional Low-Low Super Electric Grooming Table arrives, check immediately for signs of shipping damage. If you notice damage, save the shipping carton for claim purposes, and immediately report the problem to your supplier and to the shipping company. Also, save the carton for shipping in case your product ever needs repair at a remote location.

Tools Required for service: #2 Phillips Head Screwdriver
Set of metric wrenches or sockets
Pliers or cable cutter
Snap ring pliers

Paw Brothers® Professional Low-Low Super Electric Grooming Table Service Instructions

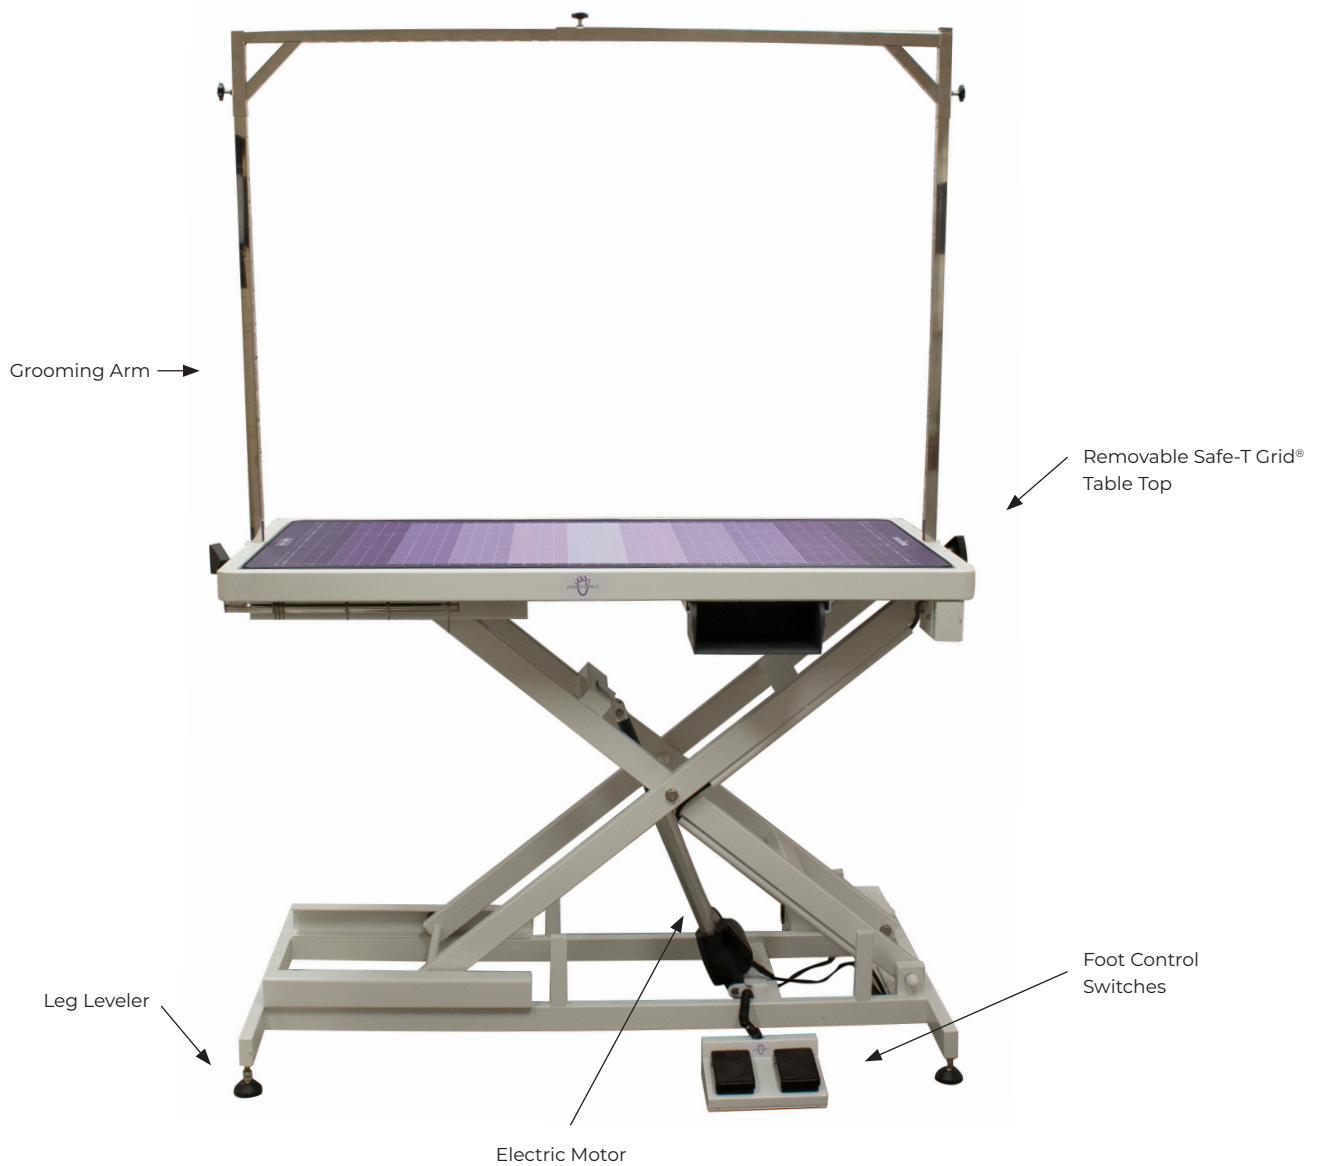

Caution: The electric table is heavy. Two people are required for these procedures.

Warning!

Disconnect all electrical power to the table before proceeding with any repairs.

Electric Motor Replacement

Step 1: Disconnect the power cord from the wall socket. Remove the table top from the frame assembly, and set it aside. Remove the grooming arm.

Step 2: Disconnect the electric motor cable from the motor control unit. Remove the snap rings and the retaining bolts that hold the electric motor to the frame assembly. See figures 1 and 2.

Step 3: Using help, lift the frame assembly up, and remove the entire motor assembly from the frame.

Step 4: Install the new motor assembly in the reverse order. Reconnect the cable to the motor control unit.

Step 5: Plug the power cord into a wall socket and test the table for proper operation.

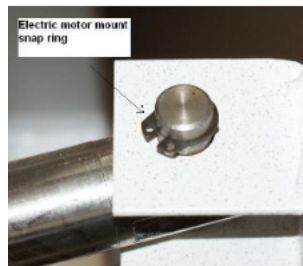


Figure 1

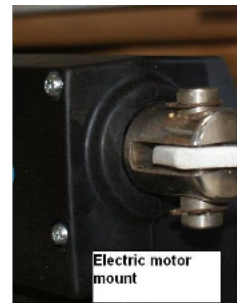


Figure 2

Motor Control Unit Replacement

Step 1: Disconnect the power cord from the wall socket. Disconnect all cable connectors from the motor control unit by pulling them straight out from the unit. See figure 3.

Step 2: Remove the four screws and clamp that hold the motor control unit to the frame.

Step 3: Install the new control unit in the reverse order.

Step 4: Carefully connect all cables to the control unit. **DO NOT FORCE THE CONNECTORS INTO THE SOCKETS.**

Step 5: Plug the power cord into a wall socket and test the table for proper operation.



Figure 3

Statement of Limited Warranty

Warranty Period

Your electric grooming table is warranted against manufacturing defects in materials and workmanship, to the original purchaser, after the date of purchase, for twelve months for parts only. During the warranty period components that do fail may be repaired or replaced at the discretion of G & G Distribution, Inc. Any warranty claims must be accompanied with a copy of the original purchase invoice. For warranty service call 1-800-525-7387.

Warranty Exclusions

This warranty does not cover failures or damages resulting from misuse, accidents, modifications, unsuitable physical or operating environments, acts of nature, transportation damages, or improper maintenance.

Limitation of Liability

Under no circumstances is the supplier liable for third party claims against you for damages, special, incidental, or indirect damages, or for any economic consequential damages, or lost profits, business revenue, goodwill or anticipated savings. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.